


Synchronized full extension undermount slides installation


16mm/19mm Drawer installation dimensions(with locking device)

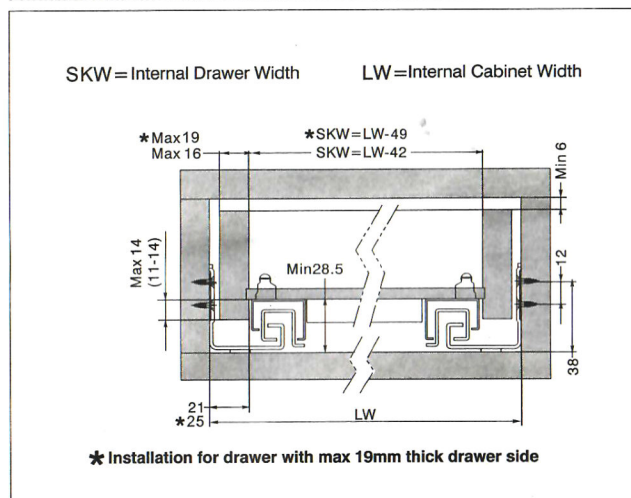


Cutting dimension of rod for Push-open synchronization (mm)

Max 16mm drawer side-Cutting dimension of rod for Push-open synchronization	LW-172
Max 19mm drawer side-Cutting dimension of rod for Push-open synchronization	LW-180


Soft-closing drawer back preparation

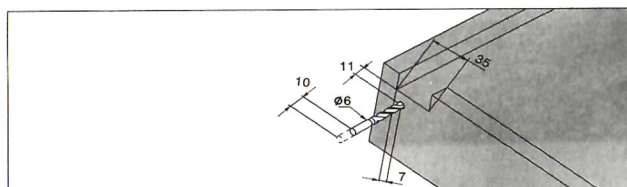


Push-open drawer back preparation

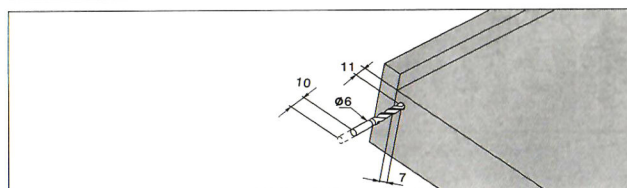


Locking device installation

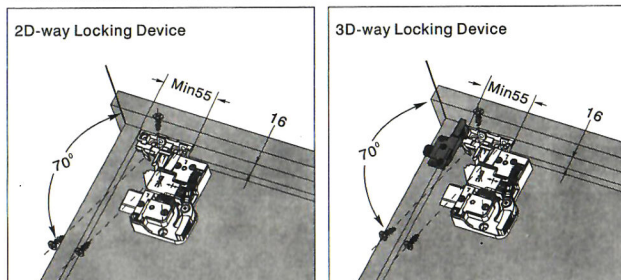


Standard Drawer installation dimensions

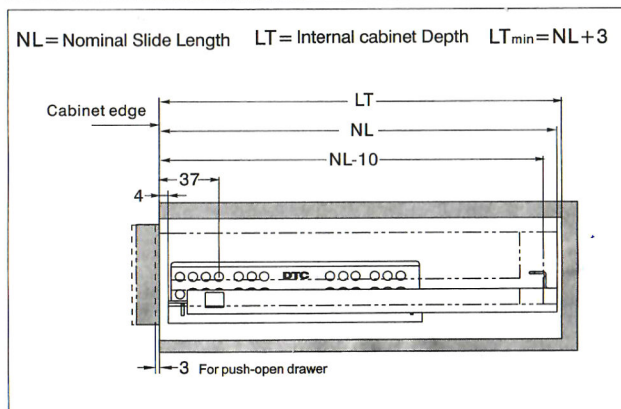

Inner drawer installation dimensions

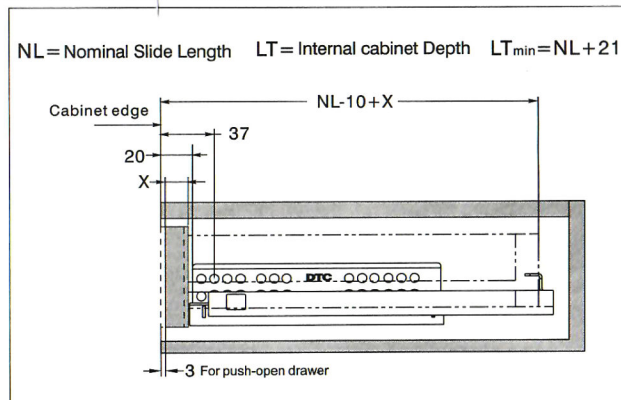

Screw Positions of the Slides

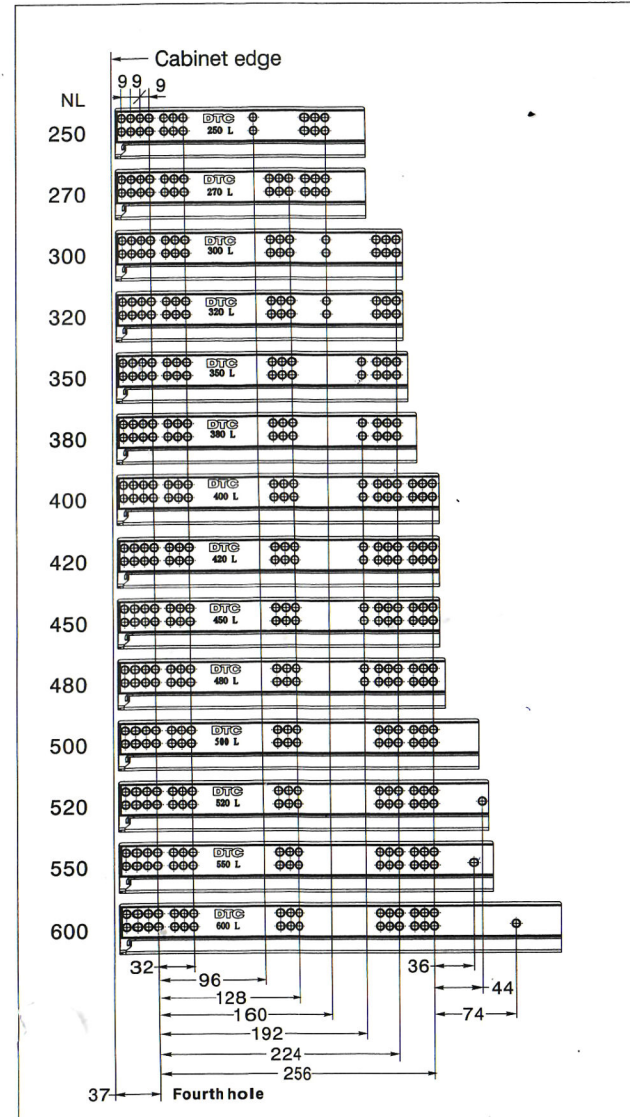


DTC
Global Quality Benchmark

Website: www.dtc.dtc.com


Drawer assembly

3D

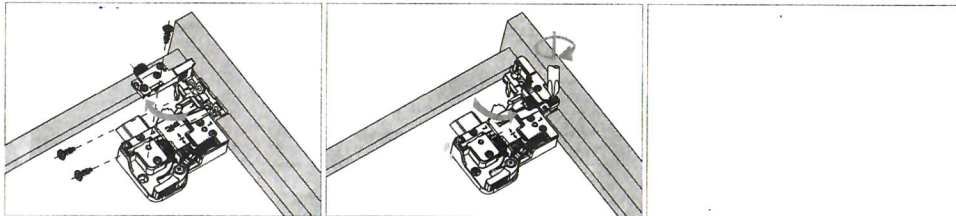


Move out the adjusting part and fix the locking device onto the drawer bottom. Put the adjusting part back and tighten the screws.

2D

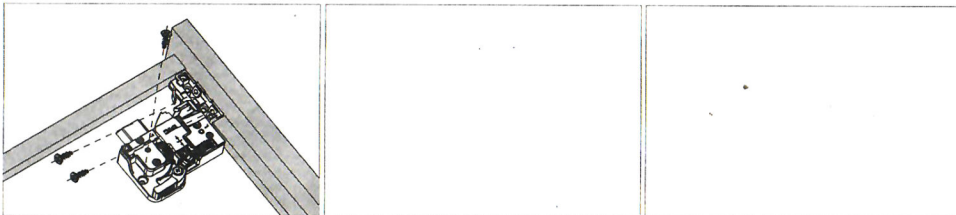


Fix the locking device onto the drawer bottom.

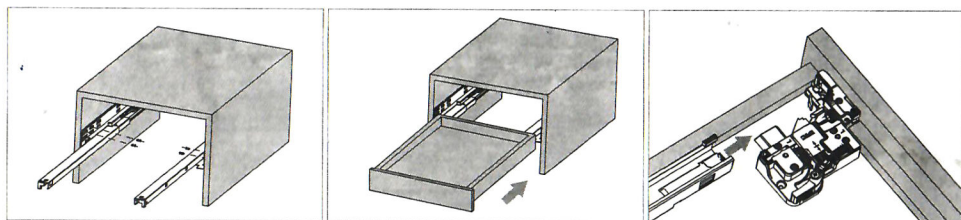

Fix the slide onto the cabinet.

Lay the drawer bottom onto the slide then push the drawer into the cabinet.

Synchronization push-open rod assembly

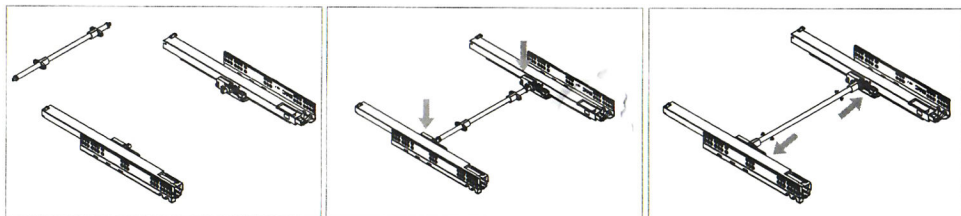


Cut the rod

Snap the rod into push-open device on the slide

Screw on and finish

Adjustments

3D

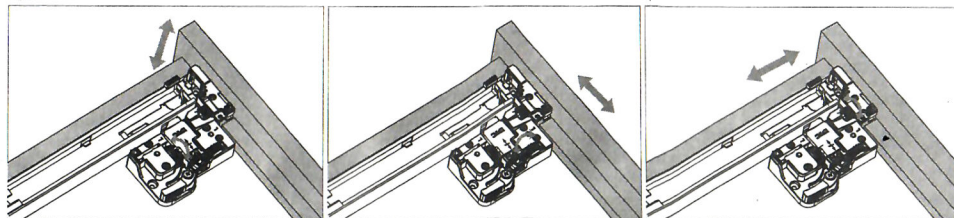


height adjustment

Side adjustment


Depth adjustment

2D

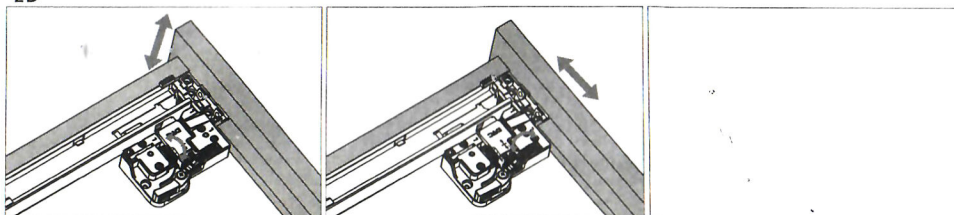


height adjustment

Side adjustment

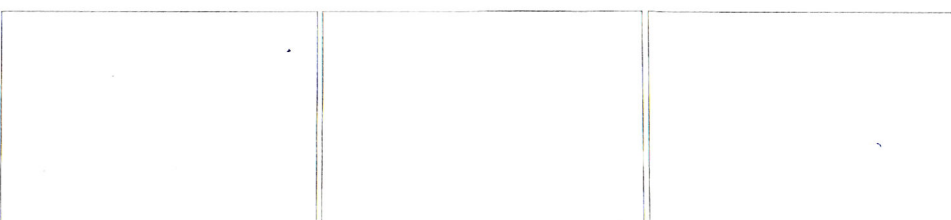

Removal

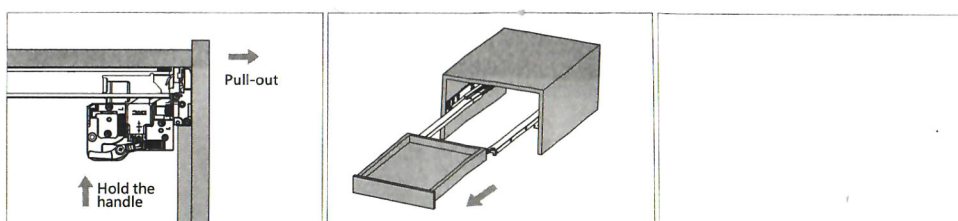

For removal, hold the handle and pull out the drawer.